

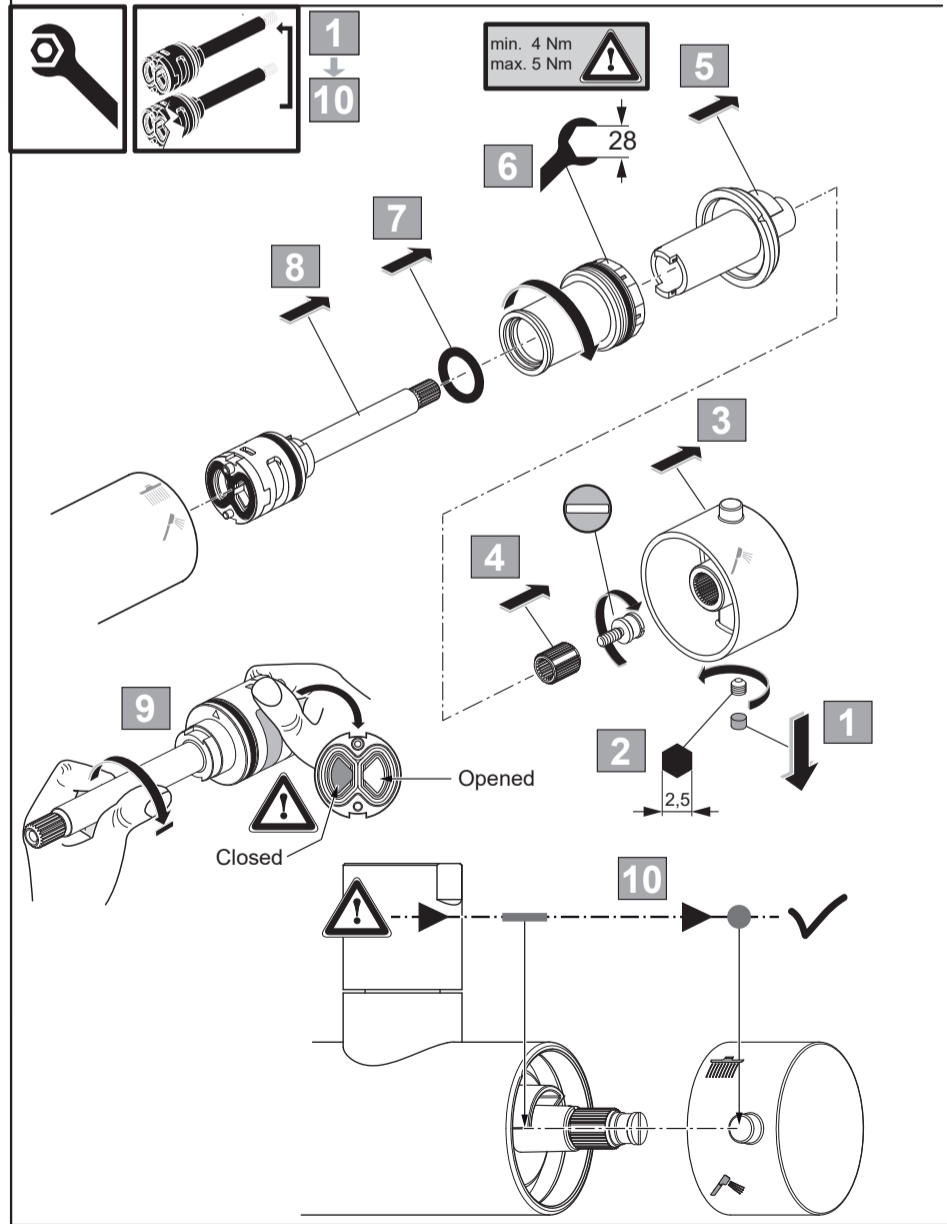



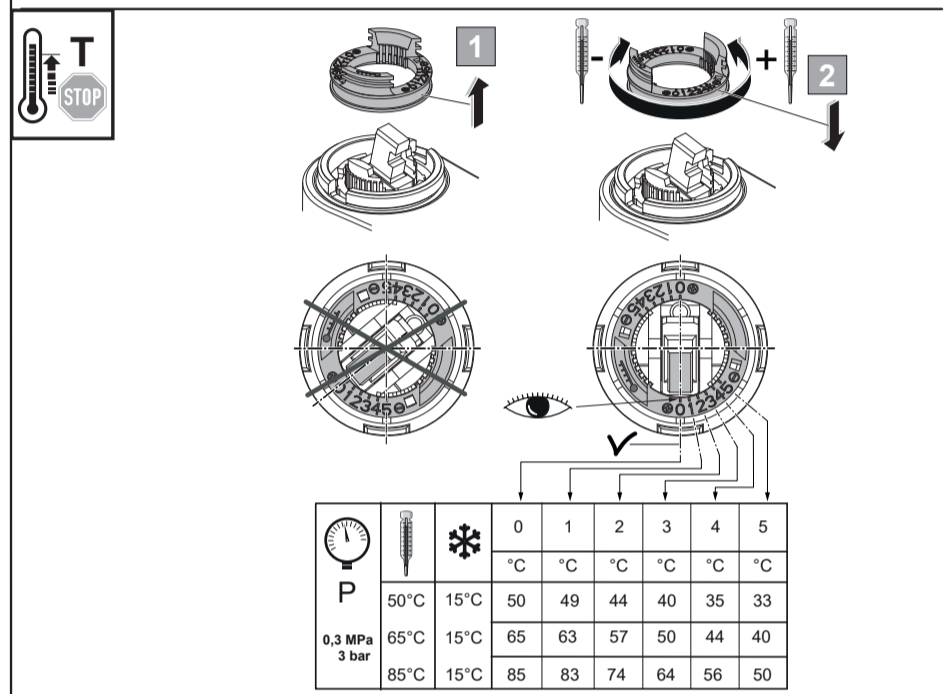


Spare Parts / Ersatzteile / Pièces de recharge / Pezzi di Ricambio / Piezas de requesto /
 Parte de reposição / Reserveonderdelen / Reservdelar / Reservedeler / Varaosat /
 Vraosat / Varahlutir / Ανταλλακτικά / Yedek Parçalar / Náhradní díly / Náhradné diely /
 Nadomestni deli / Резервни части / Запчасти / Części Zapasowe / Piese de schimb
 / Rendelhető alkatrészek / Запасні частини / Reservni delovi / Резервни делови /
 Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezervju daļi

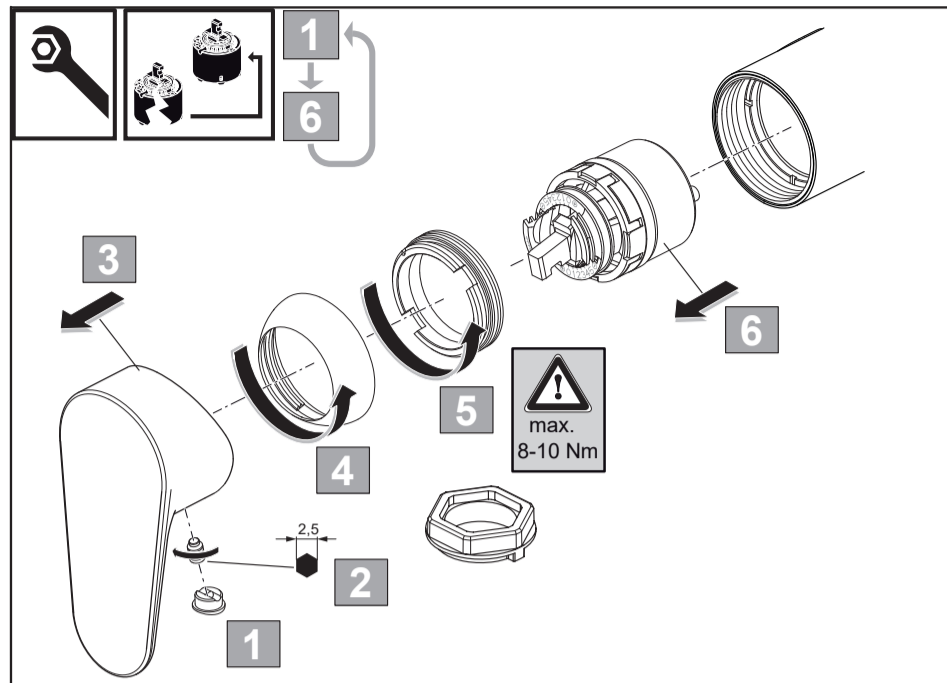

XX = AA, GN, ...

Pos.	Part No.
1	A 861 781 XX
2	B 961 373 XX
3	B 960 650 NU
4	B 961 374 NU
5	A 861 156 NU
6	A 861 793 NU
7	A 861 376 NU
8	A 861 788 XX
9	A 861 498 NU
10	N 0429 77 NU
11	BE 175 XX
12	B ??? ??? XX

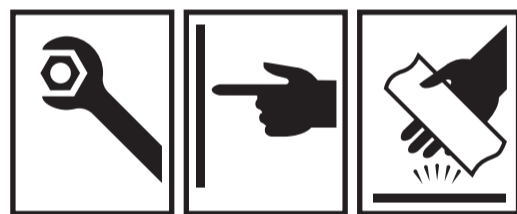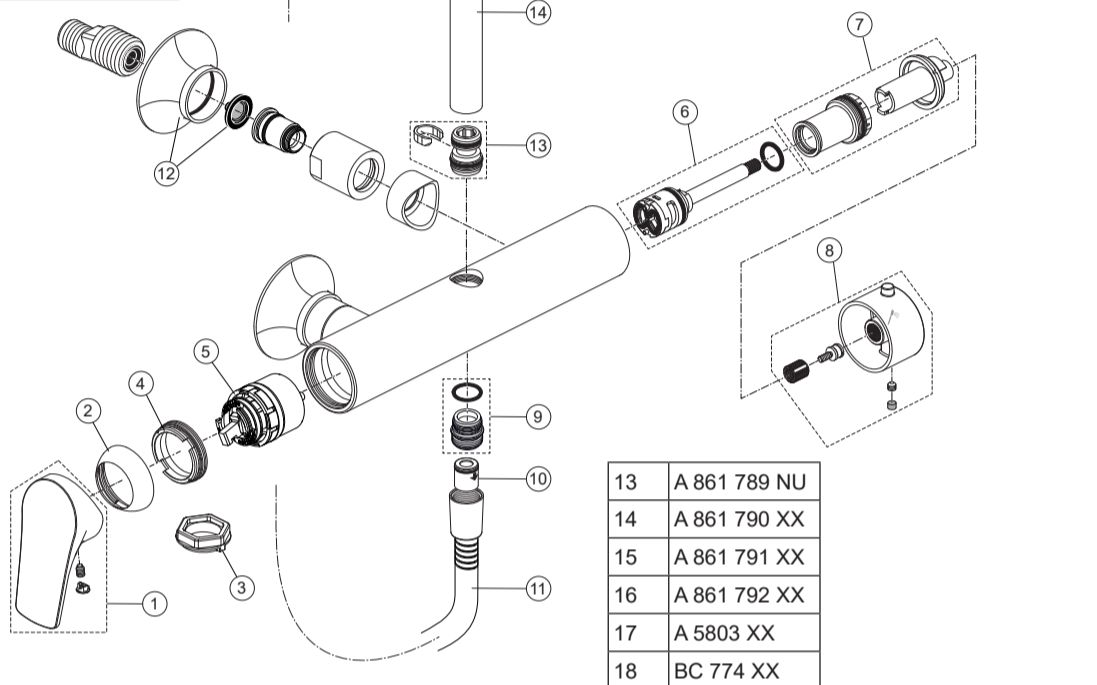


Ideal Standard

LA DOLCE VITA


BD 674 ..





0124 / A 869 103

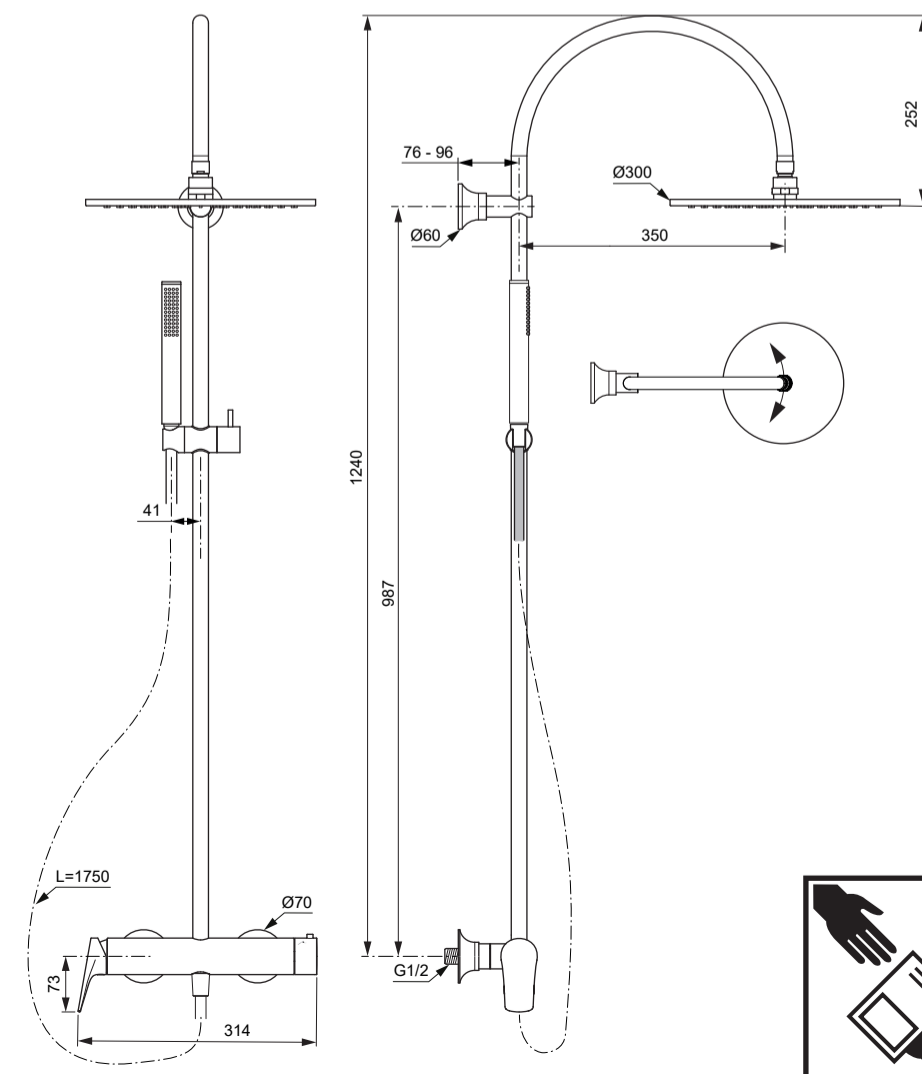

Ideal Standard International NV
 Corporate Village - Gent Building
 Da Vincilaan 2
 1935 Zaventem
 Belgium

www.idealstandard.com

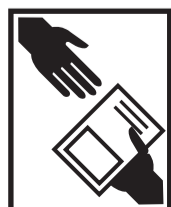

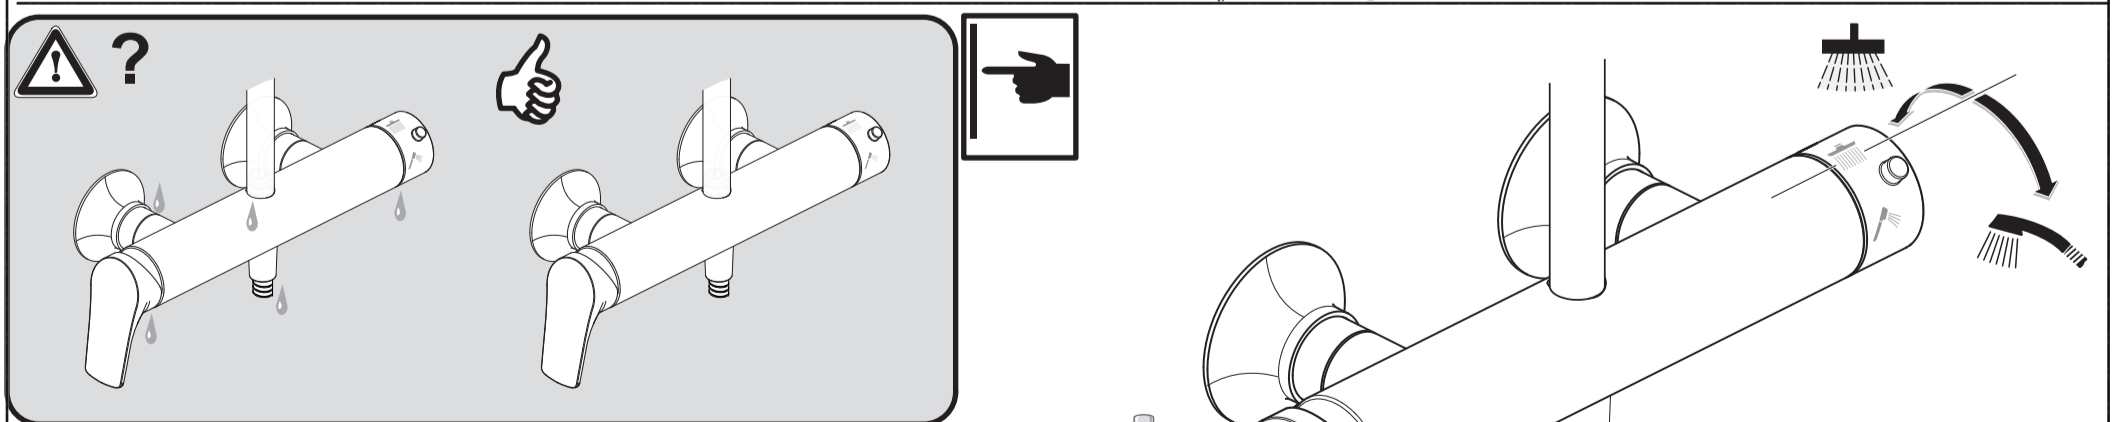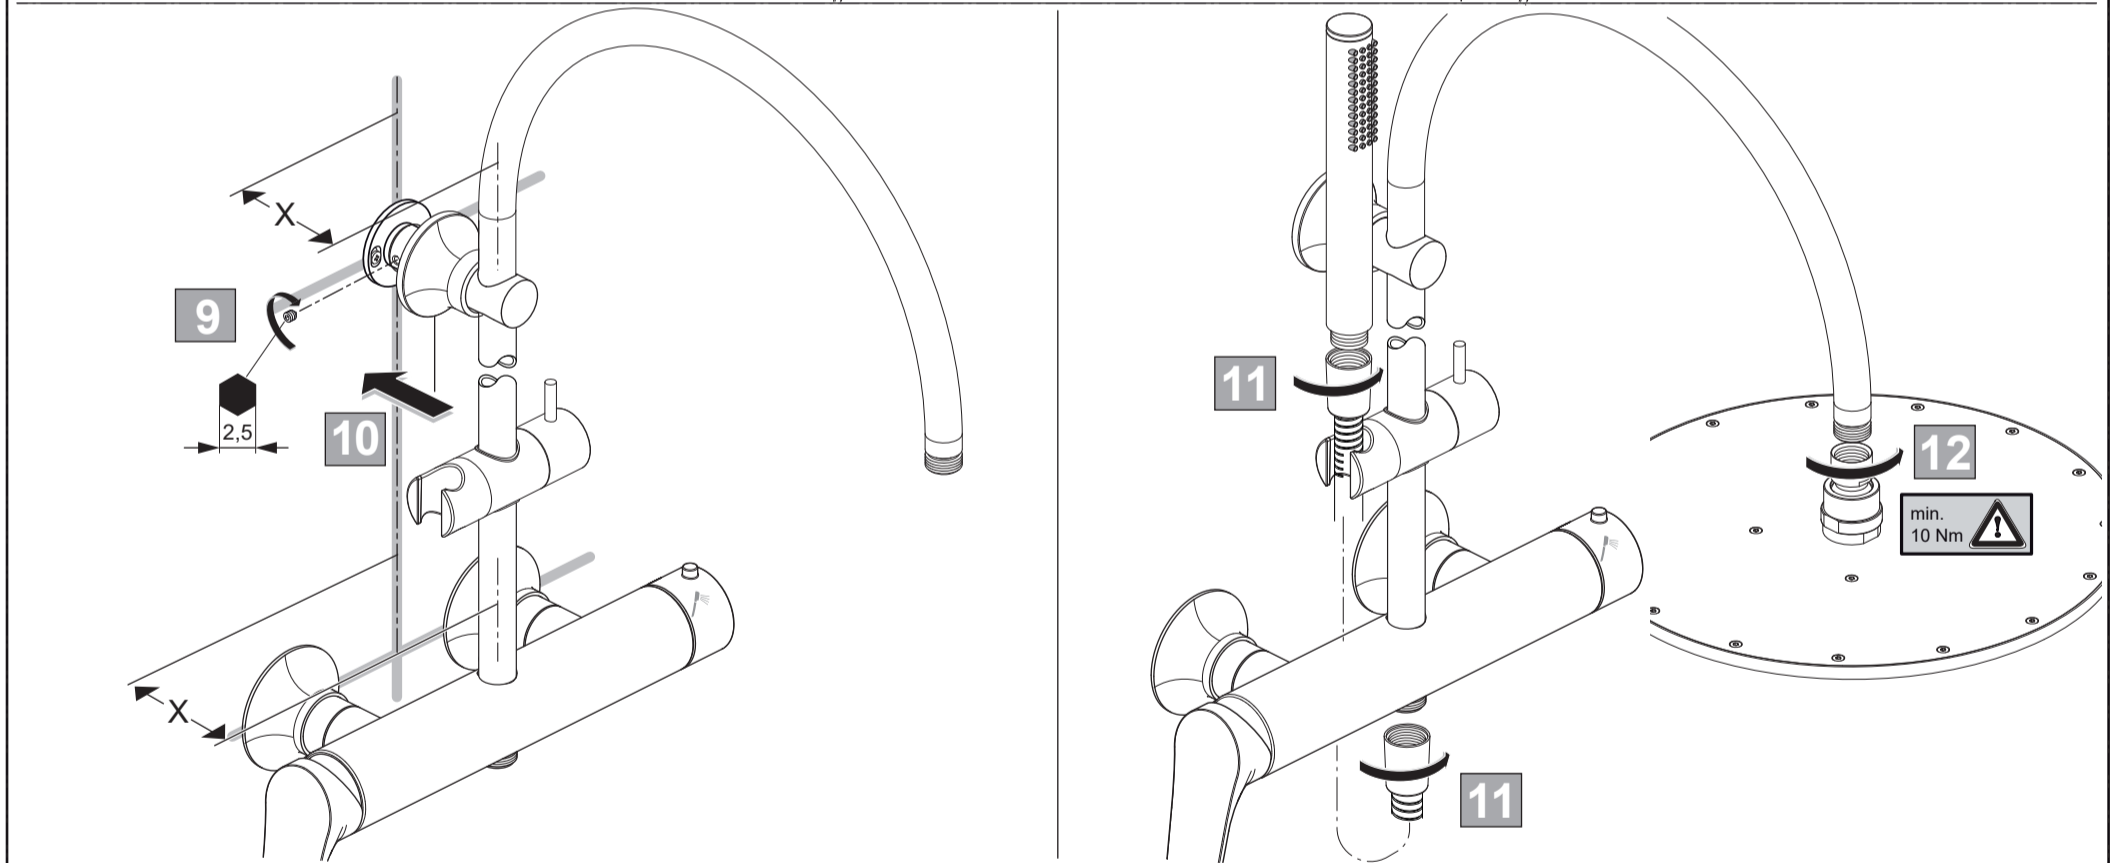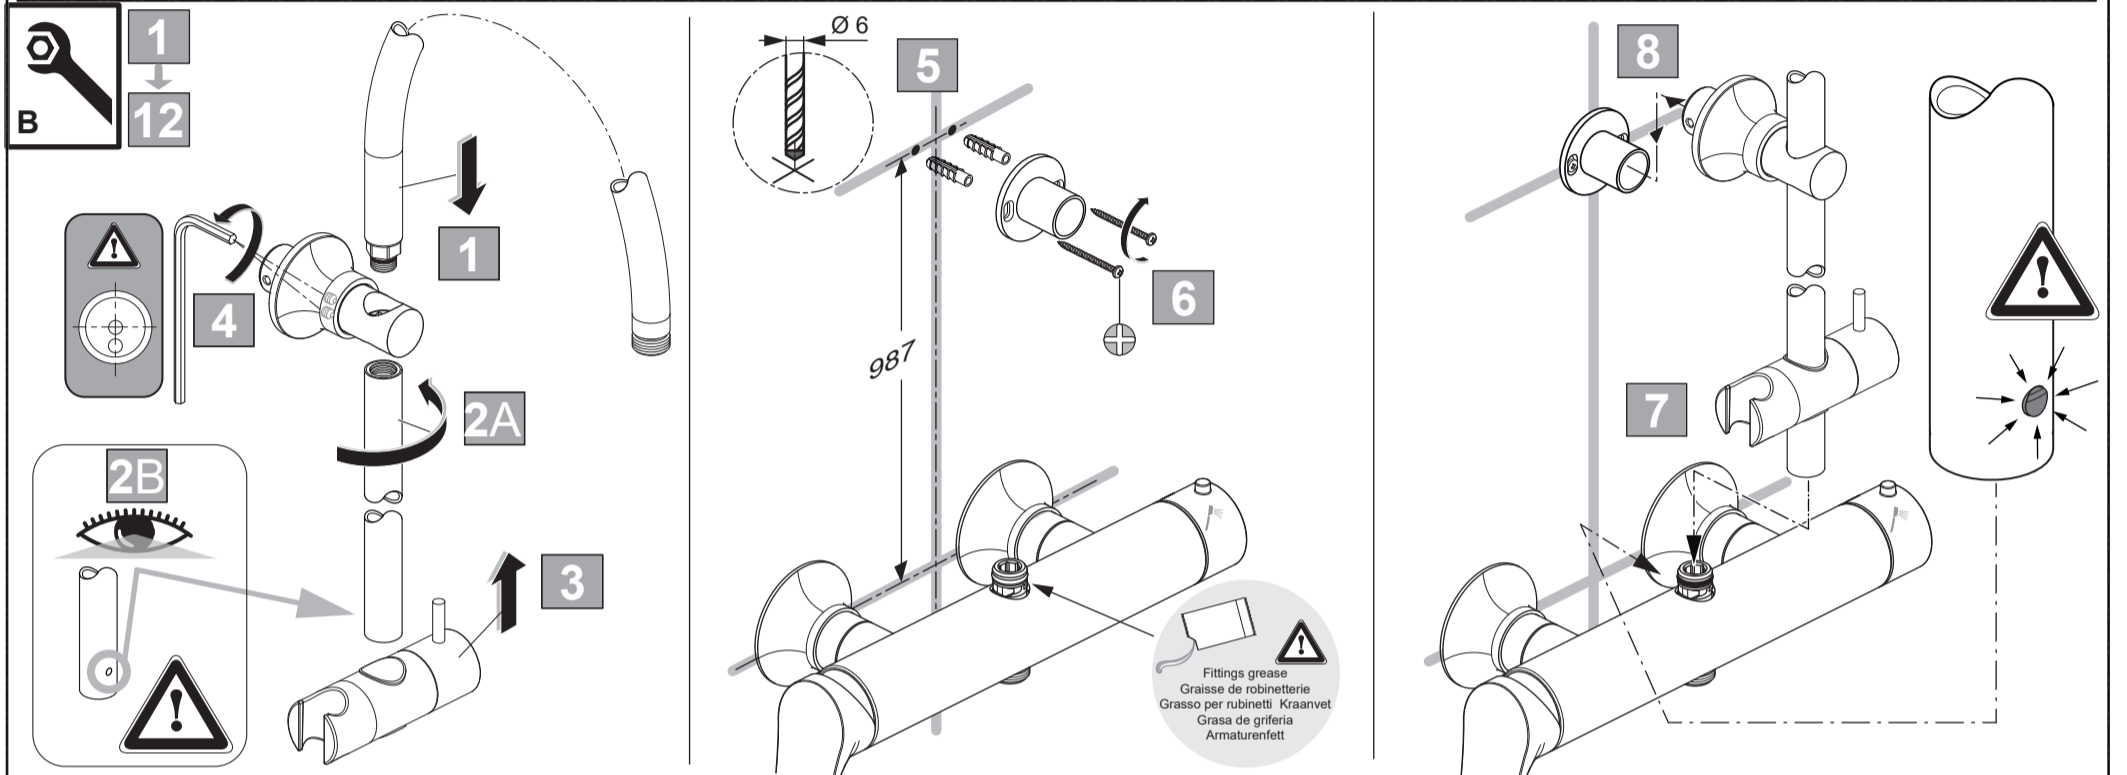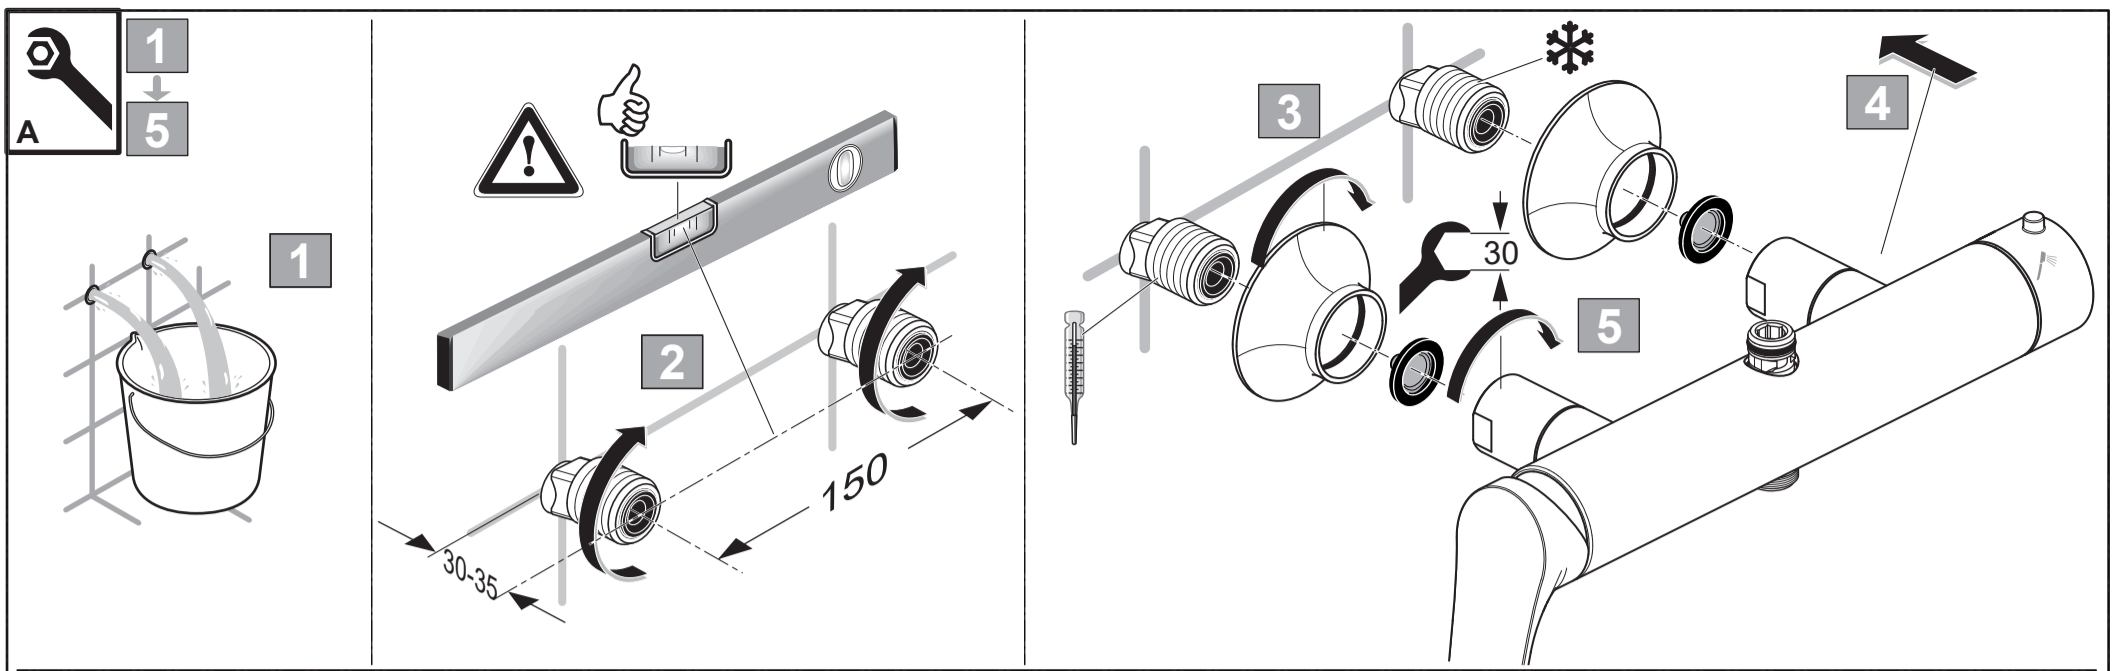

	P bar		MAX. 10		5		Q (3 bar)
	T °C		MAX. 80		65		I/min
					55		8 12

