
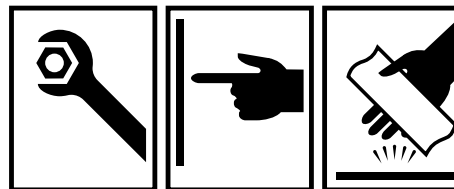


Ordering spares / Ersatzteil - Regelung / Pièces de rechange /
 Parti di ricambio / Lista de recambios / Onderdelen bestellen
 (NL/B) / Κωδικό Ανταλλακτικών / Bestilling af reservedele
 / Beställning av reservdelar / Bestilling av reservedeler /
 Резервни части / Запчасти / Części zapasowe / Piese de
 schimb / Rendelhető alkatrészek / Запасні частини / Резервни
 делови / Резервни делови / Atsarginių dalių / Tellitavad varu-
 osad / Rezerves daļas / Náhradní díly / Náhradné diely / Yedek
 parça siparişi / Nadomestni deli

XX = AA, AD,




- 1 - A 861437 NU
- 2 - A 861434 XX
- 3 - A 962270 NU
- 4 - A 861431 XX
- 5 - B 960500 NU
- 6 - A 960196 NU

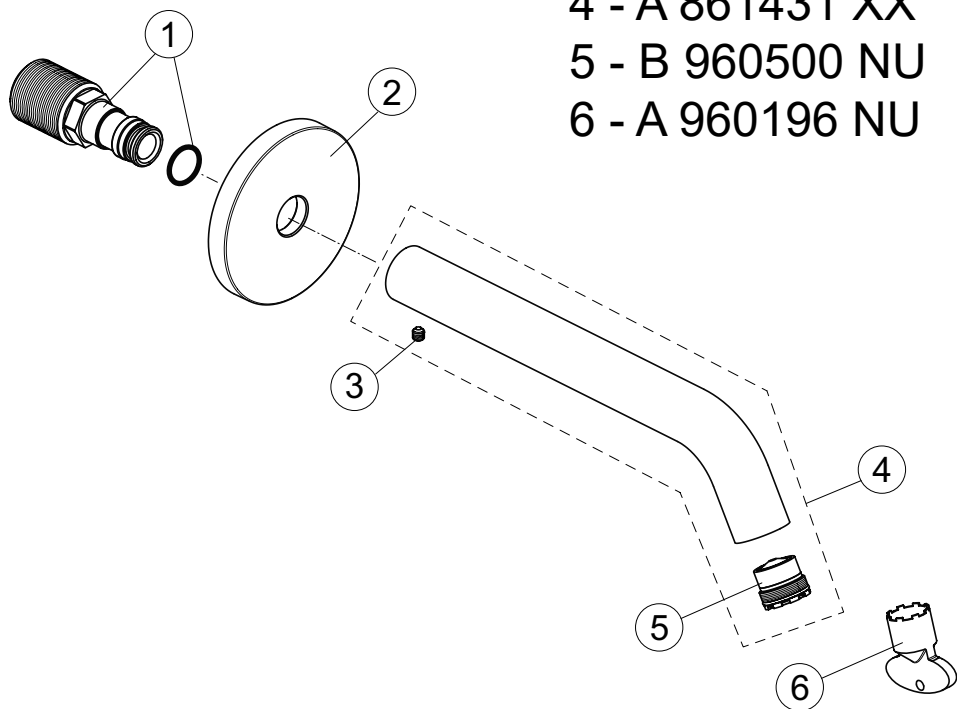





Ideal Standard

B D973 ..

03.2024 / B565410

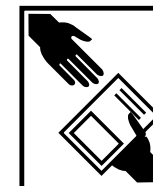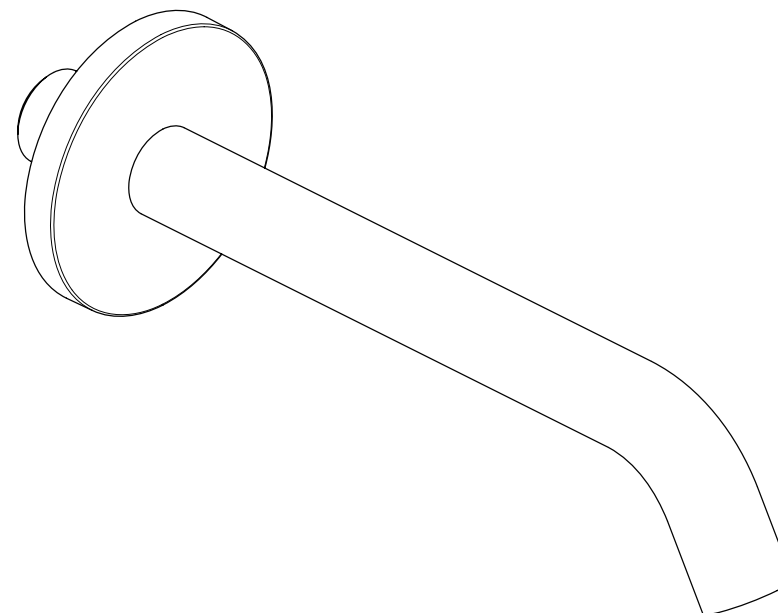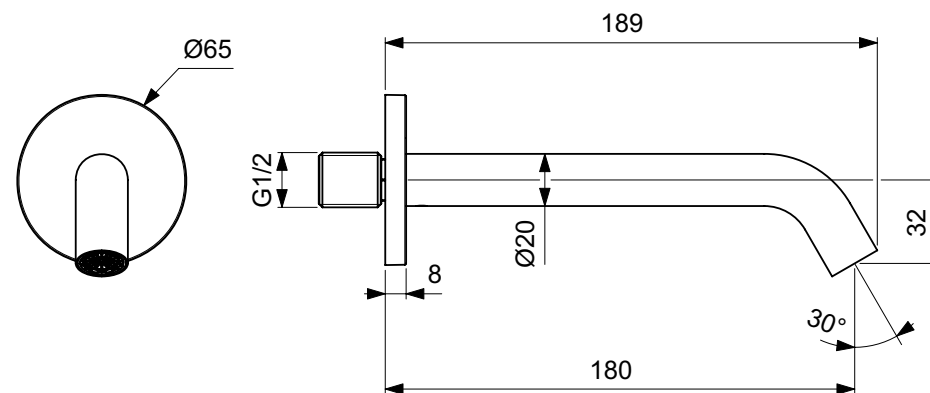

Ideal Standard International NV
 Corporate Village – Gent Building
 Da Vincilaan 2
 1935 Zaventem
 Belgium
<https://www.idealstandard.com>

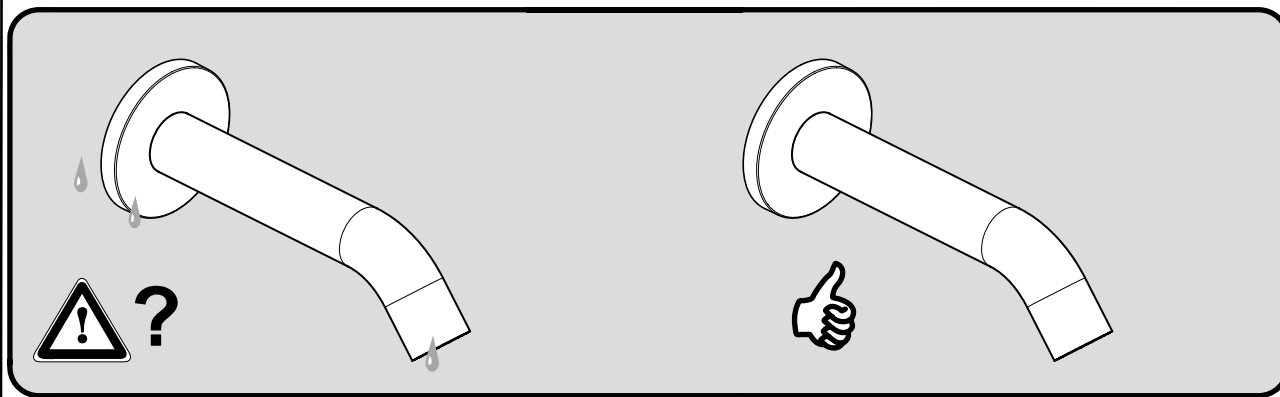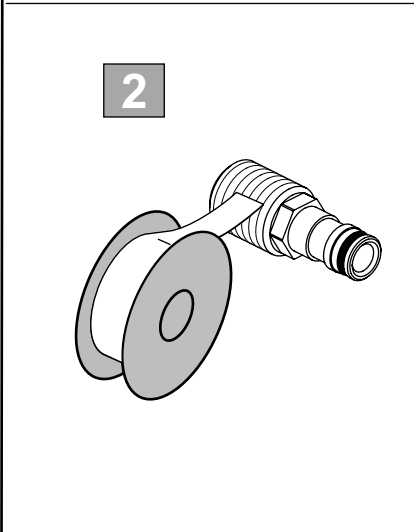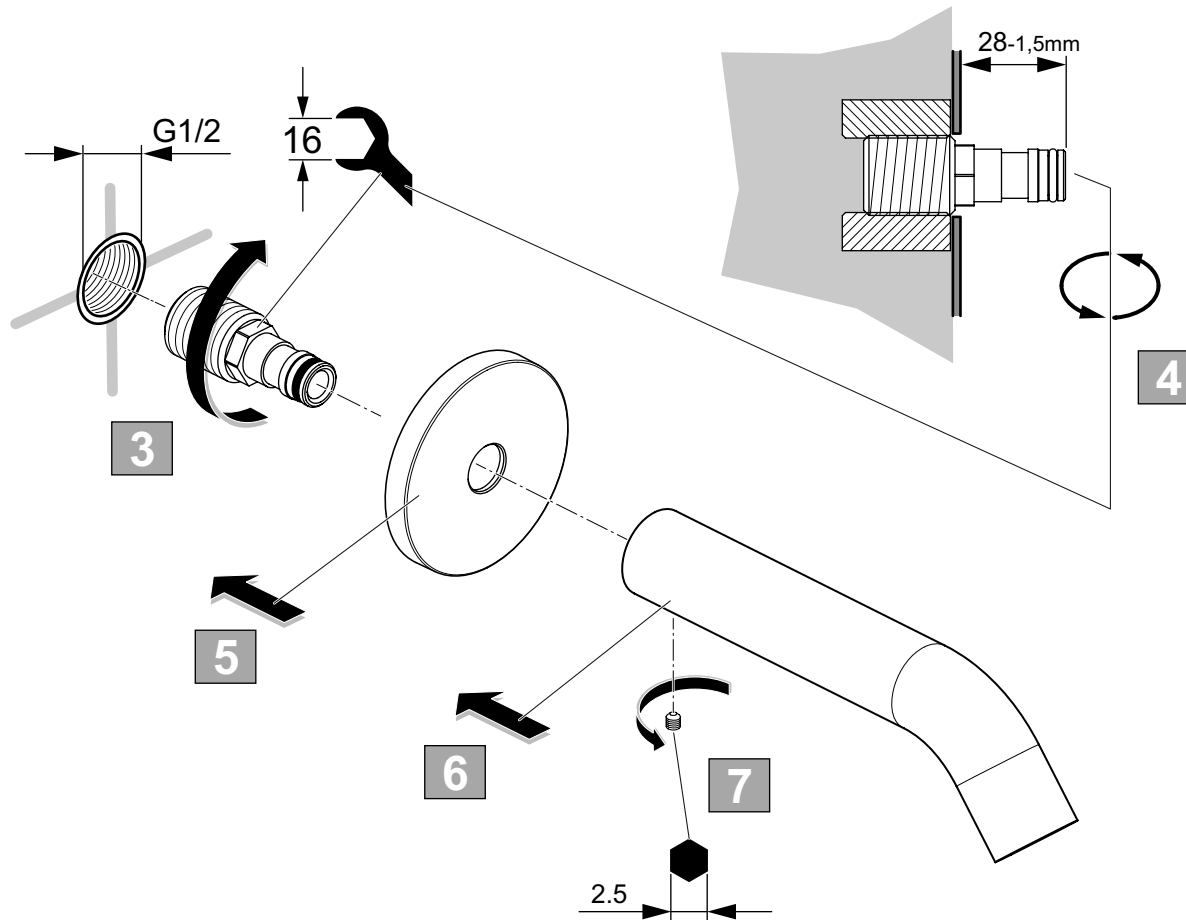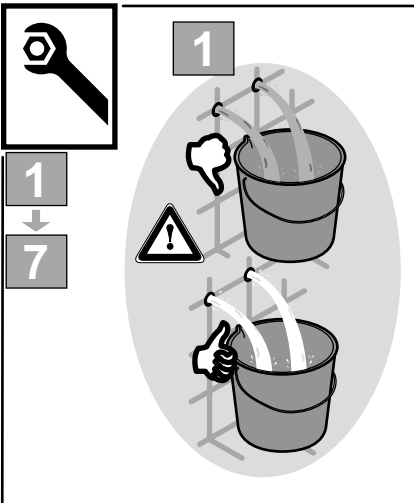

	P	bar	MIN. 0,5		MAX. 5	Q (3 bar)
	T	°C	MIN. 10	MAX. 80		
						25